
# User Manual - tempmote.®-S1 Single-Use Temperature Logger



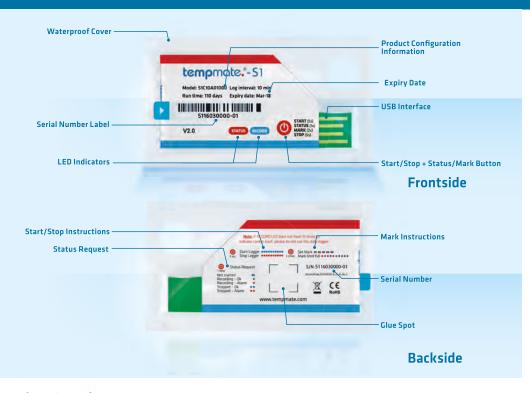

## **Product Overview**

This document describes specific validation procedures for tempmate. 9-51 data loggers, for the purpose to ensure the proper operation and provide a reliable temperature and time record during transportation and storage

Technical Specifications		Certifications	EN 12830, CE, RoHS
Recording Options	Single-Use	Validation Certificate	Hardcopy and PDF file in memory
Temperature Range	-30°C to 70°C	Software	PDF or CSV Reader / <b>temp</b> base.®-D optional
Temperature Accuracy	±0.5 (-20°C/+40°C); ±1.0 (other range)		
Temperature Resolution	0.1°C	Report Generation	Automatic PDF & CSV report
Data Storage Capacity	16.000 readings	Password Protection	Optional on request
Shelf Life / Battery	2 years¹ / CR2450 button cell	Connection Interface	USB 2.0, A-Type
Recording Interval	10 minutes (standard, others on request)	<b>Alarm Configuration</b>	Optional, up to 5 points
Recording Duration	up to 110 days² (standard, others on request)	Reprogrammable	With free <b>temp</b> base.®-D software
Startup Mode	Button or software	Accessories incl.	Shipping Documents, Certificate, Reprogram Label and Seal-Bag
Stop Mode	Button, software or stop when full		
Protection Class	IP67 / NEMA 6	Depending on optimal storage conditions (+15°C to +23°C / 45% to 75% rH) Depending on application temperature (very low / high temperatures may shorten it)	
Dimensions	83 mm × 47 mm × 7 mm (L × W × H)		
Weight	14.6 g		

## **Operation Instructions**



O1 Keep button pressed for minimum 5 seconds to start recording. Then RECORD LED flashes 10 times, which indicates a successful starting. If STATUS LED is lit for 3 seconds, please do not use the logger (indicating low battery)! Tear off serial number label for your reference.



03 Keep button pressed for minimum 5 seconds to stop recording. Then STATUS LED flashes 10 times, which indicates a successful stopping.



O2 Press button once at any time to check current status of the logger. Double-click button to set a mark in the report. See details of these

optional features in tables below.



04 After stopping record, tear off the transparent plastic cover and connect the logger to a USB port of the computer. The PDF ans CSV report will be generated automatically and can be found in the device's "tempmate" folder.

## Operation Indication

#### Start / Stop

Status	Action	LED confirmation
Start Logger	5 sec pushing button	RECORD LED flashing 10 times ••••••
Set Mark	double-click button	STATUS LED + RECORD LED flashing 5 times ● ● ● ●
Stop Logger	5 sec pushing button	STATUS LED flashing 10 times ••••••

### Status Request by pushing Button 1 time

Status	Action	LED confirmation		
Not Started	push button 1 time	STATUS LED + RECORD LED flashing 1 time ●		
Recording - OK	push button 1 time	RECORD LED flashing 1 time •		
Recording - Alarm	push button 1 time	STATUS LED flashing 1 time •		
Stopped – OK	push button 1 time	RECORD LED flashing 2 times ●●		
Stopped – Alarm	push button 1 time	STATUS LED flashing 2 times ••		

V6.3 • tempmate.com V6.3 tempmate.com